

KONČAR

HR

UPUTE ZA UPORABU

EN

USER'S MANUAL

HLADNJAK
REFRIGERATOR

UHC54300SBM



KONČAR - KUĆANSKI APARATI d.d.

Slavonska avenija 16 , 10001 Zagreb , Hrvatska

tel : ++ 385 1/2484 555

fax : ++ 385 1/2404 102

www.koncar-ka.hr

SIGURNOSNA UPOZORENJA

**NE RABITE APARAT PRIJE NEGO PROČITATE
UPUTE ZA UPORABU I UPOZNATE SE S
NJEGOVOM UPORABOM.**



Ovaj je aparat namijenjen uporabi u kućanstvu te za sličnu namjenu u slijedećim situacijama : za kuhinje osoblja u trgovinama, uredima i drugim radnim prostorima, na farmama, za uporabu gostiju u hotelima, motelima i drugim vrstama smještaja, u pansionima, za potrebe catering usluga i sličnih neprodajnih svrha.

⚠ POZORNOST! Po primitku aparata, raspakirajte ga, ambalažni materijal (plastičnu foliju, stiropor, drvo...) uklonite izvan domašaja djece kako se djeca ne bi ozlijedila (progutala manje komade ili se ugušila plastičnom folijom).

⚠ POZORNOST! OPASNOST OD GUŠENJA!
Ambalažni materijal (plastična folija, stiropor, drvo...) je opasan za djecu. Djeci nemojte dozvoliti igranje ambalažnim materijalom, kako ne bi progutala manje komade ili se ugušila plastičnom folijom.

Ovaj aparat mogu upotrebljavati djeca u dobi od osam godina i starija te osobe sa smanjenim tjelesnim, osjetnim ili duševnim sposobnostima ili pomanjkanjem iskustva i znanja ako dobiju nadzor ili uputu o uporabi aparata na siguran način te razumiju uključene opasnosti.

Čišćenje i korisničko održavanje ne smiju obavljati djeca bez nadzora. Isto vrijedi i za maloljetne osobe.
Djeca ne smiju koristiti aparat za igru.

Aparat nije namijenjen za uporabu osobama (uključivši i djecu) sa smanjenim fizičkim, osjetilnim i mentalnim mogućnostima ili s manjkom iskustva i znanja. Takve osobe mogu koristiti aparat samo uz odgovarajuće upute i pod nadzorom osobe zadužene za sigurnost.

Kućni ljubimci moraju biti pod stalnim nadzorom te im se mora onemogućiti penjanje po aparatu, zavlacenje u isti, kao i griženje kablova. Prije uporabe aparata obratite pozornost!



POZORNOST! OPASNOST OD POŽARA, ZAPALJIVI MATERIJALI !

Ako aparat koristi R600a, R290 ili slično rashladno sredstvo koje je jako zapaljivo (ovo možete saznati s naljepnice na aparatu) tada trebate biti pažljivi tijekom dostave i montaže kako biste spriječili oštećenja na ostalim dijelovima aparata. Izolacijski materijal tretiran je ciklopentanom koji je vrlo zapaljiv. Ukoliko dođe do ispuštanja plina zbog oštećenja dijelova aparata, maknite aparat izvan dosega otvorenog plamena ili izvora paljenja te na nekoliko minuta prozračite prostor u kojem je aparat smješten. Prilikom prenošenja i postavljanja aparata, nemojte oštetiti sklop rashladnog plina.

POZORNOST! Nemojte oštetiti sklop rashladnog sustava.

POZORNOST! U aparatu nemojte čuvati eksplozivne tvari poput posuda s zapaljivim aerosolom (sprejevi svih vrsta).

POZORNOST! Držite ventilacijske otvore, na kućištu ili na ugradbenoj strukturi aparata, otvorene, tj. nepokrivene.

POZORNOST! Ne koristite mehaničke naprave ili druga sredstva za ubrzavanje postupka odmrzavanja, osim onih koje je preporučio proizvođač.

POZORNOST! Ne koristite električne uređaje unutar odjeljka za čuvanje hrane, osim ako nisu onog tipa koje je preporučio proizvođač.

POZORNOST! Aparat je namjenjen samo za internu uporabu.

POZORNOST! Priključni vod se ne smije prignječiti ili oštetiti prilikom montaže, te ne smije biti blizu izvora topline (npr. kuhala ili štednjaka), jer bi se mogao rastopiti te zapaliti.

POZORNOST! Ne uključujte aparat u električnu instalaciju ako je priključni vod oštećen. Oštećeni priključni vod mora biti zamijenjen ispravnim, a smije ga zamijeniti jedino stručna osoba ili serviser. Nestručno priključenje i popravci mogu uzrokovati električni udar i tjelesne ozljede.

POZORNOST! Aparat se mora odspojiti s napajanja nakon uporabe i prije postupaka održavanja.

UPOZORENJE: Ne upotrebljavajte mehanička ili druga sredstva za ubrzavanje postupka odleđivanja, osim onih koja preporučuje proizvođač.

UPOZORENJE: U odjeljcima za pohranu hrane nemojte upotrebljavati električne uređaje, osim onih koje preporučuje proizvođač.

UPOZORENJE: Dotrajali hladnjak zbrinite u skladu s lokalnim propisima jer sadrži zapaljivi plin, izolaciju i rashladno sredstvo. Rashladno sredstvo i ciklopentan koji se koriste u hladnjaku su zapaljivi. Stoga se isluženi hladnjak ne smije zbrinjavati blizu bilo kakvih izvora plamena. Aparat mora biti zbrinut od strane odgovarajuće tvrtke sa odgovarajućom kvalifikacijom, koja ne vrši zbrinjavanje otpada izgaranjem, kako bi se spriječila šteta za okoliš ili bilo koja druga šteta.

UPOZORENJE: Prilikom postavljanja aparata, pazite da se kabel napajanja ne priklješti ili ošteti.

UPOZORENJE: Hladnjak nemojte spajati na višestruke utičnice ili prijenosne izvore napajanja. Nemojte upotrebljavati produžne kabele ili neuzemljene adaptere (s 2 kontakta).

OPASNOST: Opasnost za djecu koja se slučajno mogu zatvoriti u aparat. Prije zbrinjavanja isluženog hladnjaka ili zamrzivača: Uklonite vrata. Ostavite police na mjestu kako se djeca ne bi mogla lako popeti unutra.

OPASNOST: Ako aparat ima bravu tada je obvezatno treba ukloniti ili uništiti. Obvezatno odrezati šarnire na vratima te ukloniti vrata i police te ih propisno zbrinuti, jer bi se djeca mogla unutar aparata penjati ili zaglaviti, što pak može dovesti do nesreće.

UPOZORENJE: Ima li vaš model brave na vratima ili odjeljcima, njihove ključeve držite dalje od dohvata djece – nikako u blizini aparata – kako se djeca ne bi zaključala unutra.

UPOZORENJE: Aparat se ne smije čistiti visokotlačnim parnim aparatom za čišćenje jer može doći do kratkog spoja i oštećenja.

UPOZORENJE: Kako bi se izbjegla nestabilnost, aparat mora biti učvršćen prema uputama (ako aparat ima tu mogućnost).

Za samostojeće aparate: oni nisu namijenjeni ugradnji u elemente, tj. nije namijenjen za uporabu kao ugradbeni aparat.

Za aparate s hladnim pretincem: neke vrste svježeg povrća i voća osjetljive su na hladnoću te stoga nisu prikladne za pohranjivanje u ovakvim pretincima.

Za aparate s ledomatom: Priključiti na vodovodni priključak sa pitkom vodom.

Kako biste spriječili kontaminaciju hrane, pazite na sljedeće:

- Dugotrajno otvaranje vrata može prouzročiti značajan porast temperature unutar aparata.
- Redovito čistite površine koje dolaze u kontakt s hranom, kao i dostupne odvođe.
- Očistite spremnike za vodu ako nisu korišteni 48 sati; isperite sustav dovoda vode ako nije korišten 5 dana (napomena 1).
- Sirovo meso i ribu čuvajte u aparatu u prikladnim posudama, tako da ne dodiruju i ne kaplju po drugim namirnicama.
- Odjeljci zamrzivača s dvije zvjezdice prikladni su za čuvanje već zamrznutih namirnica, čuvanje ili pravljenje sladoleda te kockica leda (napomena 2).
- Odjeljci zamrzivača s jednom, dvije i tri zvjezdice nisu prikladni za zamrzavanje svježe hrane (napomena 3).
- Za aparate bez odjeljka s 4 zvjezdice: takvi aparati nisu prikladni za zamrzavanje namirnica (napomena 4).
- U slučaju dužih razdoblja nekorisćenja aparata, isključite ga, odledite, očistite, osušite i ostavite vrata otvorena kako biste spriječili stvaranje plijesni u unutrašnjosti.

Napomena 1, 2, 3, 4: Provjerite vrijede li ove napomene za vaš model aparata.

Zamjenu ili popravak LED rasvjete obavlja proizvođač, njegov ovlašteni servis ili slična kvalificirana osoba.

Ovaj aparat ima izvor osvjetljenja određene energetske učinkovitosti.

Značenje simbola:



Zabrana

Simbol označava zabranu određenog postupka, a svako nepoštivanje može rezultirati oštećenjem aparata ili opasnosti po korisnika.



Upozorenje

Simbol označava obvezatnost određenog postupka koje se mora poštivati kako taj postupak zahtjeva. Nepoštivanjem postupka može rezultirati oštećenjem aparata ili opasnosti po korisnika.



Napomena

Simbol označava postupak na koji treba obratiti pozornost, a postupak će biti posebno naznačen. Potreban je oprez ili bi se mogule dogoditi manje ili srednje ozbiljne povrede korisnika ili oštećenje aparata.

Upozorenja vezana uz električnu energiju

Za isključenje aparata iz električne mreže ne smije se povlačiti priključni vod, nego se primi utikač te ga se izvuče iz utičnice. Paziti da se priključni vod ne ošteti, prignječi ili da nema čvorova, a ako je priključni vod ili utikač oštećen tada ga treba zamijeniti. Zamjenu neispravnog priključnog voda može obaviti samo ovlašteno i kvalificirano servisno osoblje.

Utikač mora dobro sjesti u utičnicu, a kontakt mora biti dobar kako nebi došlo do iskrenja. Zidna utičnica obvezatno mora biti uzemljena, predviđena za odgovarajuću struju i napon.

Ako dođe do istjecanja plina ili drugih zapaljivih plinova ili para, obvezatno treba dobro provjetravati prostoriju i otkloniti uzrok istjecanja plina. Ne isključujte električne aparate jer u protivnom može doći do zapaljenja uslijed iskrenja.

Ne preporučuje se držanje regulatora, kuhala, mikrovalnih pećnica ili drugih kućanskih aparata na poklopcu hladnjaka, osim ako za to nije dana preporuka proizvođača.

Upozorenja vezana uz uporabu

Nije dozvoljeno rastavljanje, modificiranje ili bilo koje druge radnje u svrhu promjene svojstava aparata. Nepravilnim postupcima oštetiti će se aparat, jamstvo ne vrijedi, a proizvođač ne prihvaća nikakvu odgovornost za posljedice.

Popravke kvarova može izvršavati samo ovlašten servis.

Razmaci između vrata, kao i razmaci između vrata i stranice aparata, su maleni, pa prema tome treba paziti kako vrata nebi pričepila prste. Vrata pažljivo otvarati. Prilikom uzimanja smrznute hrane iz hladnjaka, paziti da ruke nisu mokre kako bi se izbjegle hladne opekline (pogotovo ako je hrana pohranjena u metalne posude).

Nemojte dozvoliti djeci da se penju na aparat ili da ulaze u isti, jer može doći do ozbiljnih povreda uslijed zatvaranja vrata ili pada sa aparata. Isto vrijedi za kućne ljubimce.

Nije dozvoljeno stavljanje teških predmeta na gornju plohu hladnjaka jer bi, prilikom otvaranja vrata, ti predmeti mogli pasti te slučajno uzrokovati povrede.

Upozorenja vezana uz spremanje sadržaja u hladnjak

U aparat nemojte stavljati zapaljive, eksplozivne, isparavajuće, korozivne tvari, kao i posude s zapaljivim aerosolom (sprejevi svih vrsta, kartuše s plinom) kako biste spriječili moguća oštećenja ili požar. To isto vrijedi za ostavljanje takvih tvari blizu ili na aparat.

Ovaj aparat je namijenjen isključivo za uporabu u kućanstvu u svrhu pohrane hrane. U skladu s normama, hladnjak za kućansku upotrebu ne može biti upotrebljena u druge svrhe kao što su skladištenje krvi, lijekova ili ostalih bio produkata.

Ne stavljajte staklene boce, konzerve, limenke s pićima te slično zatvorene proizvode u ledenicu. Boce ili limenke mogu eksplodirati i uzrokovati probleme. Nije dozvoljeno stavljati suhi led unutar hladnjaka.

Upozorenja vezana uz potrošnju energije

- 1) Ako su duže vrijeme smješteni u prostoru hladnijem od temperaturnog raspona za koji su namijenjeni, rashladni aparati neće uvijek raditi ravnomjerno (zbog mogućeg odmrzavanja namirnica ili previsoke temperature u zamrzivaču).
- 2) Pjenušava pića ne smiju se čuvati u pretincima s pre niskim temperaturama, a neke namirnice poput sladoleda pravljenih s vodom ne smiju se konzumirati prehladne.
- 3) Nemojte prekoračivati rokove čuvanja namirnica preporučene od strane njihovih proizvođača, pogotovo onih koje ste kupili već zamrznute u pretincima za hladnjak i zamrznute namirnice;
- 4) Mjere predostrožnosti potrebne za sprječavanje prekomjernog porasta temperature smrznute hrane tijekom odmrzavanja hladnjaka, poput umotavanja smrznute hrane u nekoliko slojeva novina.
- 5) Porast temperature u namirnicama tijekom ručnog odmrzavanja, održavanja ili čišćenja hladnjaka skraćuje buduće vrijeme čuvanja namirnica u hladnjaku ili ledenici.

Upozorenja vezana uz zbrinjavanje aparata

Rashladno sredstvo i ciklopentan pjenjenje materijal koji se koristi za hladnjak su zapaljivi. Stoga se isluženi hladnjak ne smije zbrinjavati blizu bilo kakvih izvora plamena i mora biti zbrinut od strane odgovarajuće tvrtke sa odgovarajućom kvalifikacijom, koja ne vrši zbrinjavanje otpada izgaranjem, kako bi se spriječila šteta za okoliš ili bilo druga šteta.



Kada je aparat otpisan: Ako aparat ima bravu tada je obvezatno treba ukloniti ili uništiti. Obvezatno odrezati šarnire na vratima te ukloniti vrata i police te ih propisno zbrinuti, jer bi se djeca mogla unutar aparata penjati ili zaglaviti, što pak može dovesti do nesreće.



Ovi proizvodi su razvijeni i proizvedeni uz uporabu kvalitetnih materijala i komponenti koje je moguće reciklirati i ponovo iskoristiti. Simbol s desne strane znači da se električni i elektronički aparati na kraju njihova uporabnog vijeka ne smiju odbacivati zajedno s ostalim kućnim otpadom. Molimo da ovaj aparat predate lokalnoj tvrtki koja se bavi zbrinjavanjem otpada ili ga odnosi u reciklažno dvorište.

Korisnik ne smije rastavljati aparat ili ostale komponente. Taj posao obavlja ovlaštena tvrtka koja se bavi recikliranjem takve vrste otpada. Ovaj aparat zadovoljava EU direktivu (2012/19/EU) u svezi zbrinjavanja električnog i elektroničkog otpada (WEEE). Ovaj aparat zadovoljava EU RoHS direktivu (2011/65/EU).

Prije uporabe aparata

Po primitku aparata, raspakirajte ga, uklonite sav materijal pakiranja, uključujući stražnje oslonce, stiropor, ljepljive trake unutar aparata te zaštitnu foliju na vratima i kućištu aparata. Sav ambalažni materijal uklonite izvan domašaja djece.

Prilikom prenošenja, ne nagnijte aparat više od 45 stupnjeva, niti ga tresite.

Aparat postaviti u dobro prozračenoj prostoriji unutar kuće.

 
Aparat ne smije biti izložen sunčanoj svjetlosti, te se ne smije postaviti u vrlo vlažnim prostorima ili biti izložen vodi.

Nije dozvoljeno prskati vodu po aparatu, kao niti postavljanje aparata u vlažne prostorije ili gdje može doći do prskanja vode jer može doći do kratkog spoja i električnog udara.

Prije priključka aparata na izvor električne energije, uvjerite se kako napon i frekvencija električne mreže odgovara podacima sa natpisne naljepnice na aparatu. Drugačiji naponi mogu oštetiti aparat. Aparat obavezno mora biti uzemljen !

Proizvođač ne preuzima nikakvu odgovornost ako dođe do oštećenja ili nesreća uzrokovanih neuzemljenim aparatom.

Dimenzije aparata

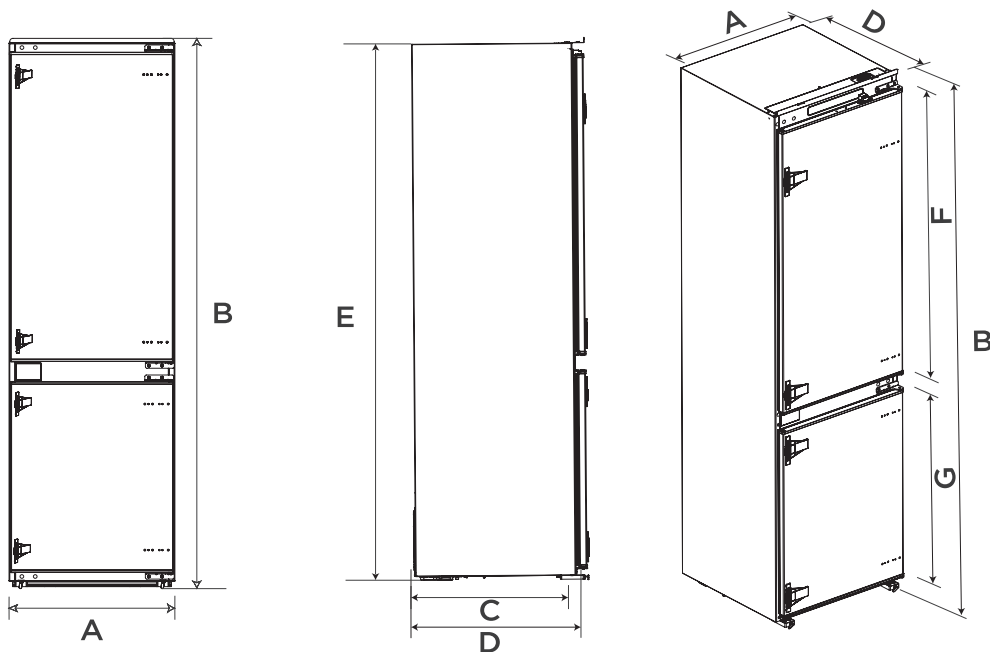

A	B	C	D	E	F	G
540	1955	515	550	1940	1076	706

Sve dimenzije su u mm.

Crteži su samo informativne naravi pa postoji mogućnost drugačijeg izgleda proizvoda u stvarnosti.

Ambijentalna temperatura

Klimatski razred	Ambijentalna temperatura
T	između +16°C i +43°C
ST	između +16°C i +38°C
N	između +16°C i +32°C
SN	između +10°C i +32°C

Hladnjak je izrađen kako bi radio u rasponu temperature specificiranom prema klimatskim standardima koji su navedeni na natpisnoj naljepnici. Ukoliko temperatura okoline izlazi iz navedenih okvira hladnjak će raditi smanjenom učinkovitošću ili će raditi nepravilno.

 
 
Performance hlađenja i zaleđivanja, te potrošnje energije mogu varirati ovisno o ambijentalnoj temperaturi, učestalosti otvaranja vrata i lokaciji aparata. Zbog toga je potrebno pravilno podesiti postavku temperature.

Ugradnja aparata


Ugradnju i montažu mora izvršiti stručna i kvalificirana osoba.

Crteži su samo informativne naravi pa postoji mogućnost drugačijeg izgleda proizvoda u stvarnosti.


1. Dimenzije elementa s vratima u koji će se ugraditi aparat

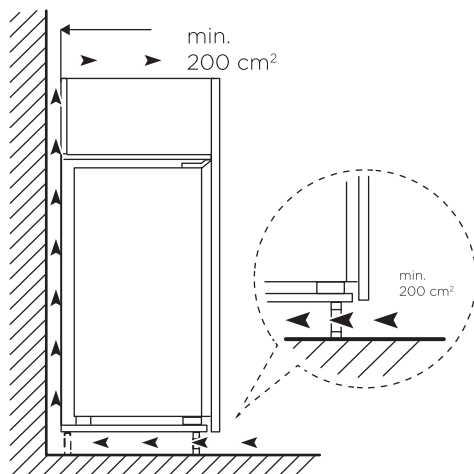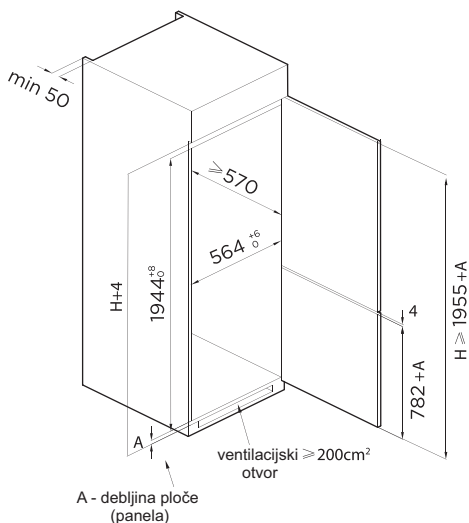

 
2. Gurnite aparat u element tako da gornji rubnjak potpuno prijanja na gornji rub elementa, a granične kukice na podupirajućim nožicama, potpuno prijanjaju na donji rub elementa.
3. Učvrstite podupiruće nožice pomoću vijaka, te vijke pokrite kapicama.

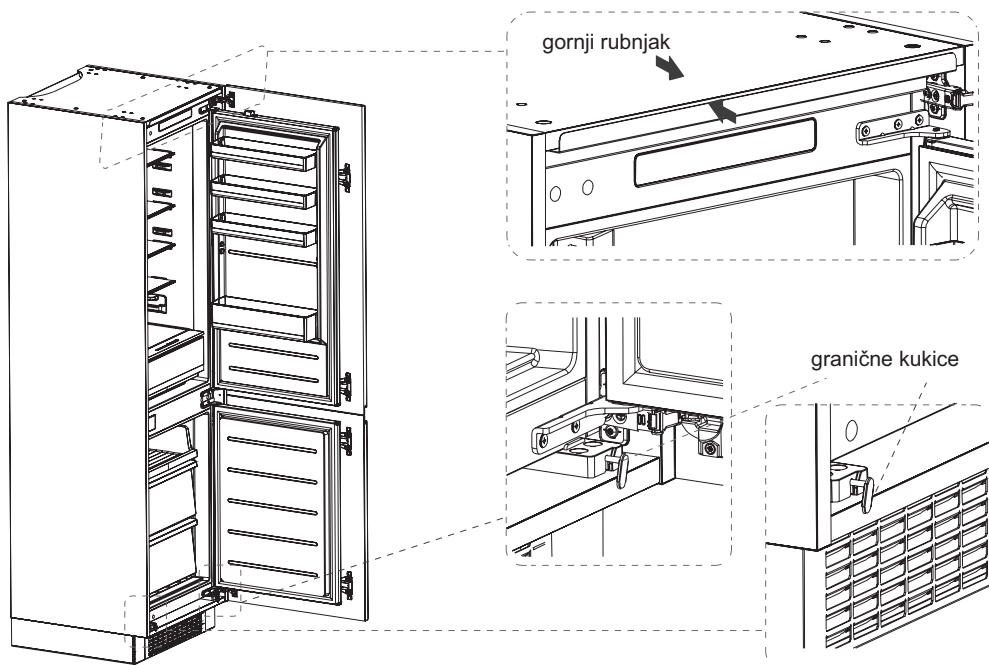

 4. Učvrstite gornji rubnjak na unutrašnji gornji rub elementa pomoću vijaka, te vijke pokrite kavicama.

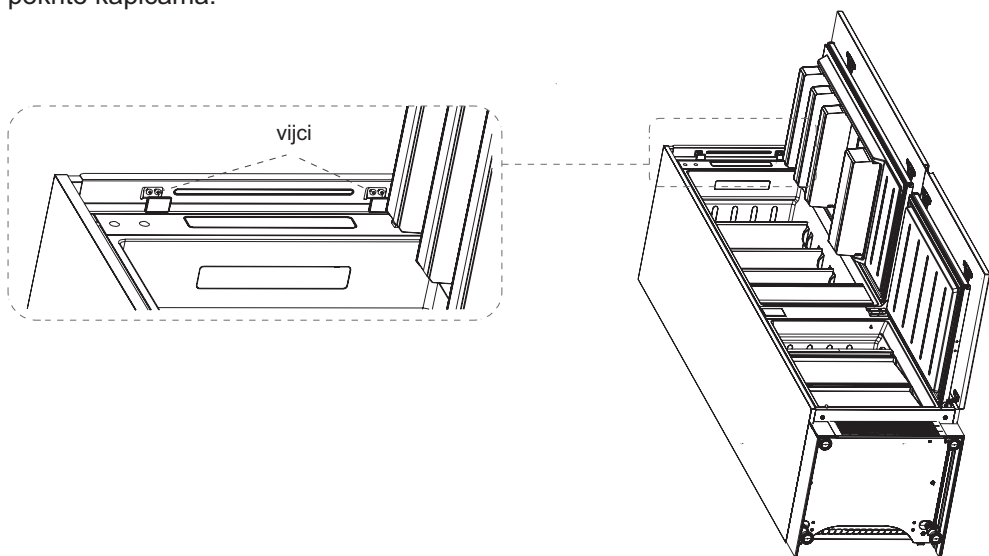

 5. Otvorite donja vrata elementa do kraja, te donja vrata na aparatu do odgovarajućeg položaja. Pomičite klizni nosač kako bi se uvjerili da je unutrašnji rub poravnat s donjim rubom vrata na aparatu. Učvrstite klizni nosač na vrata elementa pomoću vijaka, te vijke pokrijte kapicama. Gornja vrata na elementu pričvrstite na isti način. Zamijenite fiksnu poziciju nožica za niveliranje i donji šarnir, te ih ponovo učvrstite.

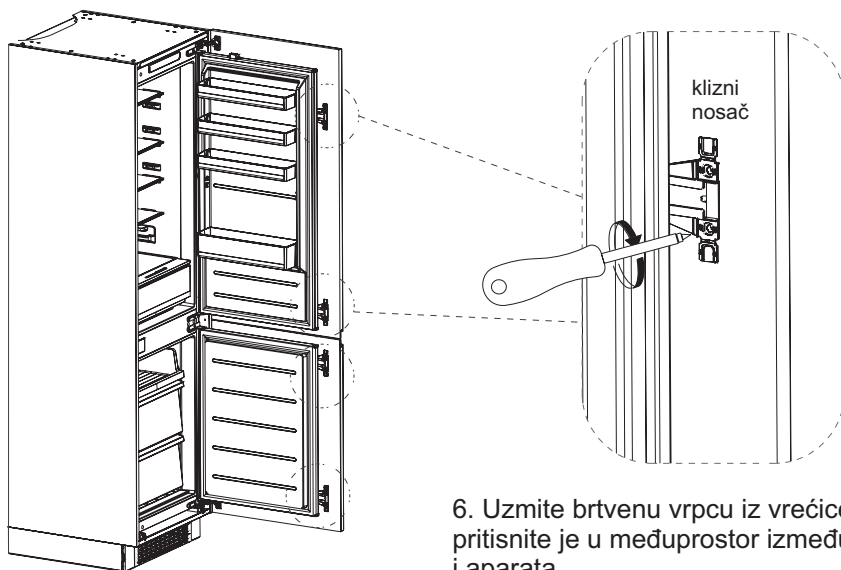


6. Uzmite brtvenu vrpcu iz vrećice s priborom, pritisnite je u međuprostor između elementa i aparata.


Promjena smjera otvaranja vrata

Ovu radnju mora izvršiti stručna i kvalificirana osoba.

 Crteži su samo informativne naravi pa postoji mogućnost drugačijeg izgleda proizvoda u stvarnosti.

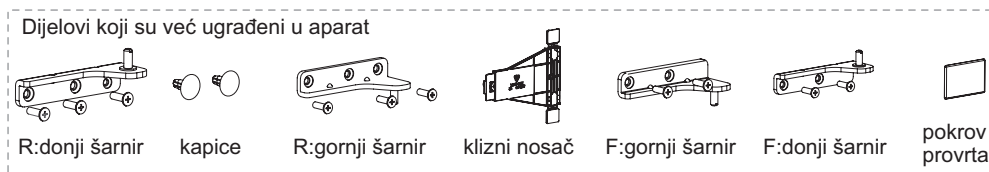


 1. Isključite hladnjak i uklonite sve predmete s polica na vratima.
2. Uklonite gornji šarnir i kapice na vratima aparata.
3. Uklonite vrata na aparatu, donji šarnir i pokrov provrta.

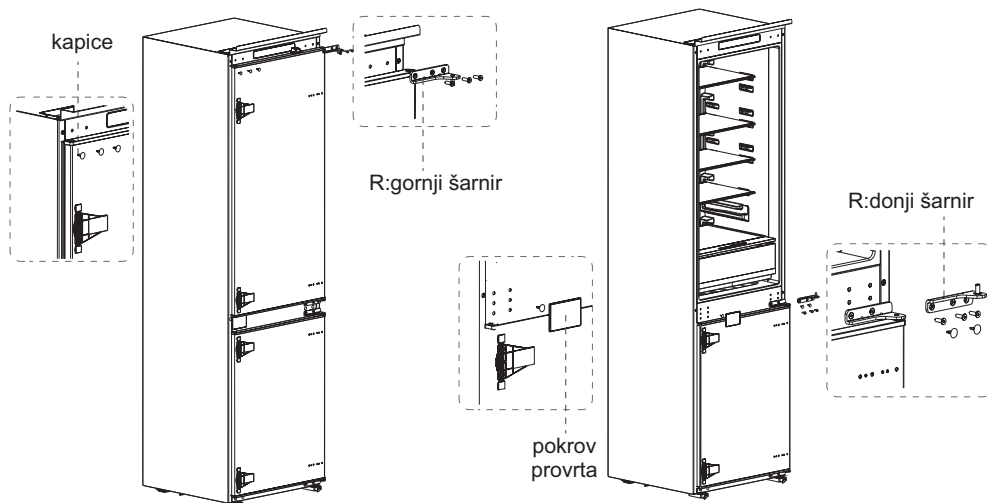


4. Zamjenite R:donji šarnir i R:gornji šarnir, te ih montirajte kako je opisano u slijedećim koracima. Nakon toga stavite gornje kapice.

 
5. Uklonite dva klizna nosača na vratima hladnjaka, zarotirajte ih za 180°, te ih montirajte na suprotnu stranu vrata hladnjaka.

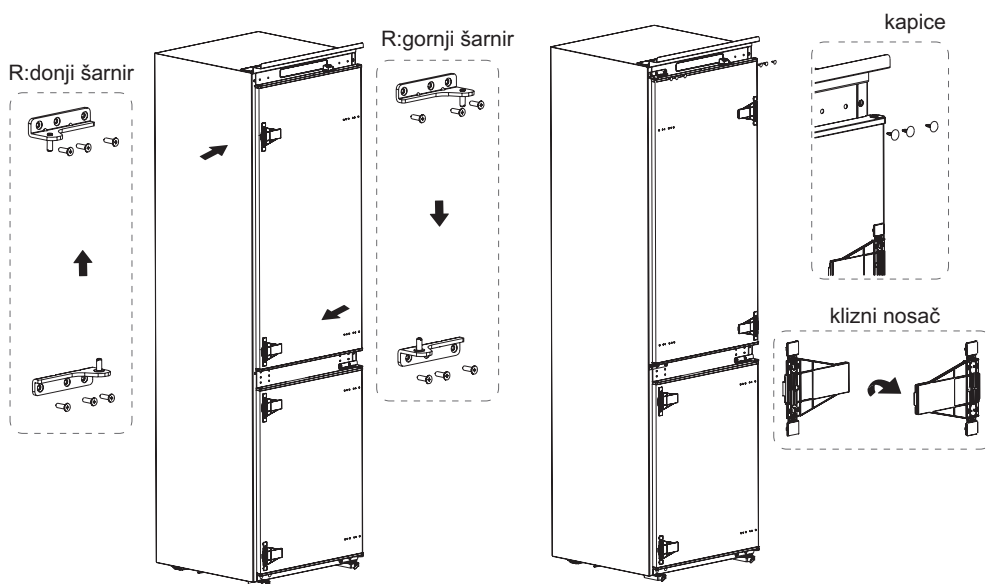

 6. Uklonite gornji šarnir i zatik na vratima ledenice.
7. Uklonite vrata ledenice, donji šarnir i kapice.

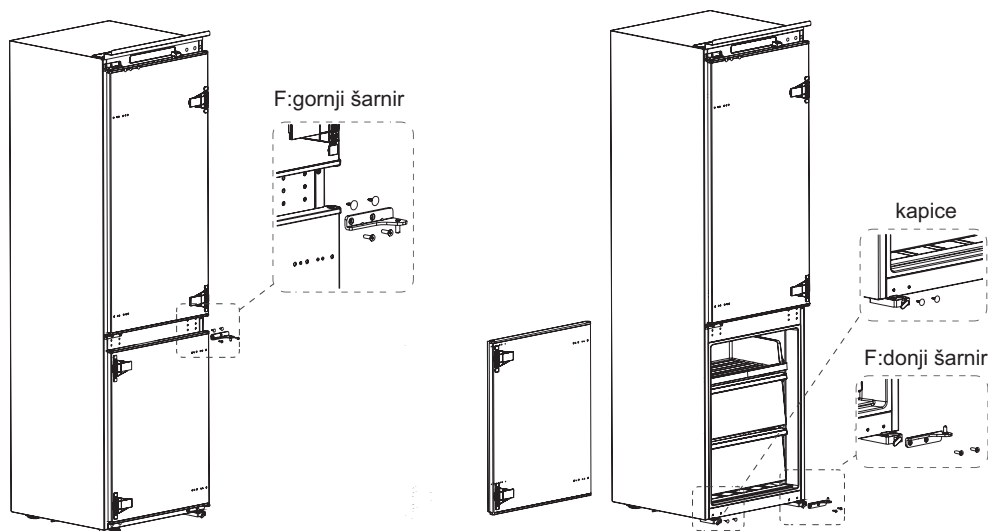

 8. Zamjenite F:donji šarnir i F:gornji šarnir, te ih montirajte kako je opisano u slijedećim koracima. Nakon toga stavite gornji pokrov provrta i donje kapice.
9. Uklonite dva klizna nosača na vratima ledenice, zarotirajte ih za 180°, te ih montirajte na suprotnu stranu vrata ledenice.

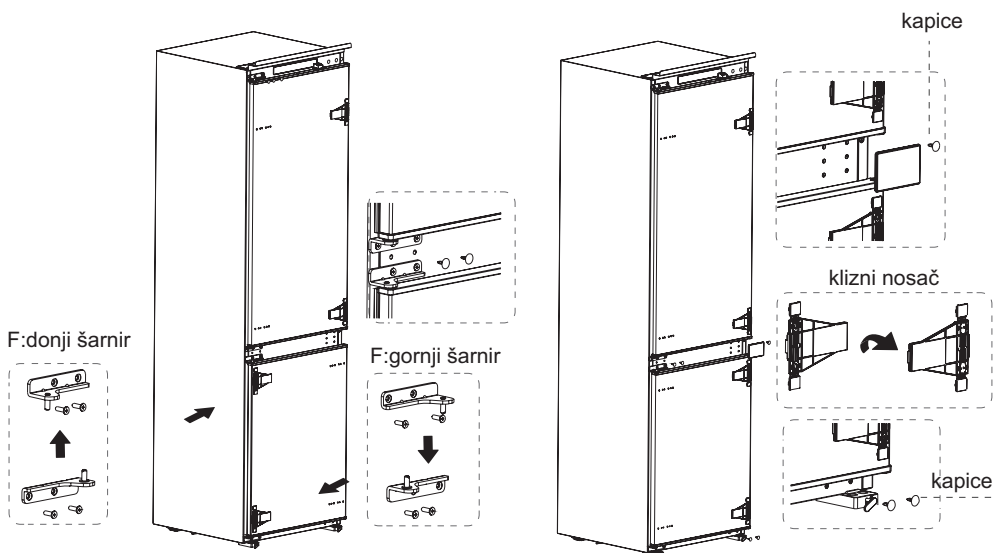

Promjena neispravnog osvjetljenja (LED osvjetljenje)

Ovu proceduru izvodi samo ovlašteni servis.

Relociranje aparata

1. Prije nego se aparat preseli na novu lokaciju, izvaditi sve predmete van.
2. Odspojiti aparat s električne mreže, kabel učvrstiti na kuku na gornjoj stražnjoj strani aparata.
3. Učvrstiti police, ladice, itd pomoću ljepljive trake. Zatvoriti vrata te spriječiti otvaranje pomoću ljepljive trake.
4. Prenosjenje trebaju izvršavati dvije ili više osoba, te paziti da se aparat ne postavi horizontalno ili naopako.

POZORNOST !

Ako se aparat koristi po prvi put ili nakon prijevoza, neka miruje oko 2 sata prije uključivanja na struju, a sve kako bi se osigurao ispravan rad.

Aparat može imati čudan miris prije uključivanja, a miris će nestati kad aparat počne hladiti.

Neka prazna hladnjak radi 2 do 3 sata (ili više od 4 sata ako je okolišnja temperatura visoka, npr. tijekom ljeta) prije nego se napuni hranom.

Savjeti za uštedu energije

Hladnjak ne postavljajte u blizinu aparata koji stvaraju toplinu ili blizu izvora topline, nego ga postavite u najhladnijem dijelu prostorije.

Toplu hranu treba ostaviti da se ohladi na sobnu temperaturu, pa ju tek onda staviti u hladnjak.

Nemojte odjednom stavljati previše hrane u hladnjak jer će kompresor raditi dulje, a hrana koja se će se sporije zamrznuti može izgubiti na kakvoći ili se čak pokvariti. Hrana treba biti propisno pakirana, a samo pakiranje neka je suho jer se time smanjuje stvaranja inja i leda.

Unutrašnjost aparata ili ladica ne oblagati folijom, krpama, papirom ili slično jer se time gubi prirodna cirkulacija hladnoće te smanjuje učinkovitost.

Organizirajte i etiketama označite vrstu hrane kako bi je lakše pronašli, te uzmite više stavki odjedamput. Time će se manje otvarati vrata te ih držali duže otvorenim.

Vrata otvarajte samo kada je to potrebno te vodite računa da su dobro zatvorena.

Hrana se može sačuvati određeni broj sati ako dođe do nestanka električne struje, a tada ne otvarajte vrata te ne stavljajte svježiju hranu u hladnjak.

Neka brtve na vratima budu čiste i dobro prijanjaju. Brtve zamijenite ako su istrošene ili oštećene.

 
Aparat treba odspojiti s električne mreže u slučaju kvara ili čišćenja. Preporučljivo je pričekati oko pet minuta prije priključenja na električnu energiju, jer se time izbjegavaju oštećenja kompresora.

Aparat radi kontinuirano nakon što se priključi na električnu mrežu.

Nije dozvoljeno nepotrebno uključivanje ili isključivanje aparata s električne mreže.

Opis aparata

Crteži proizvoda i dijelova samo su informativne naravi pa postoji mogućnost drugačijeg izgleda proizvoda u stvarnosti.

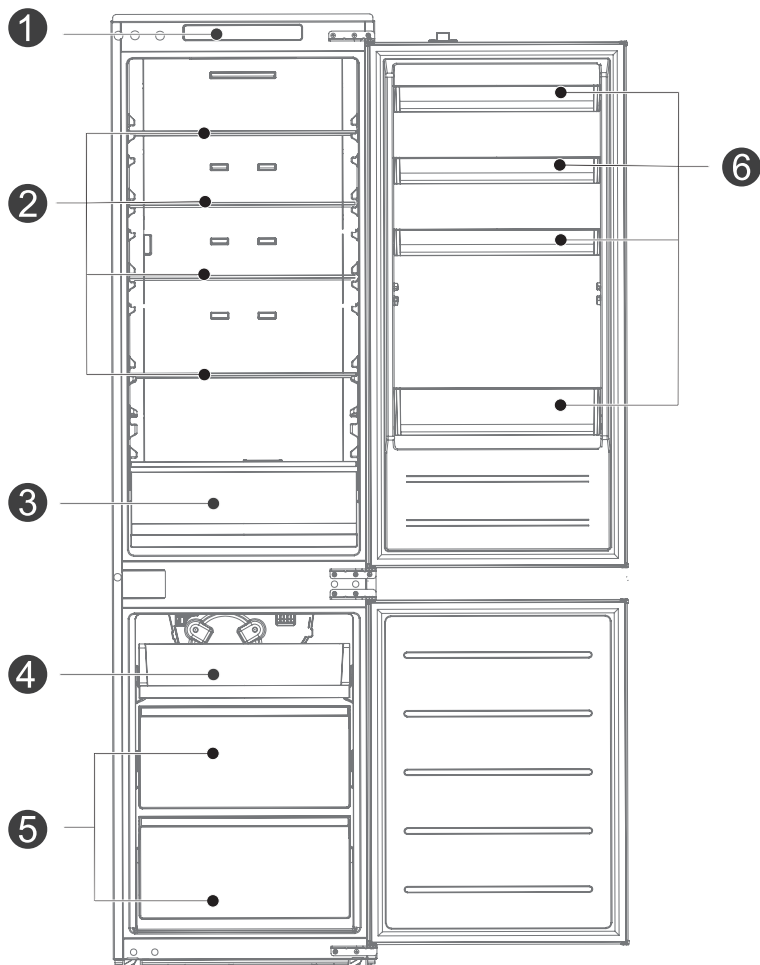


- 1. Upravljački panel
- 2. Staklene police u hladnjaku
- 3. Ladica za voće i povrće
- 4. Mala ladica
- 5. Velika ladica
- 6. Police na vratima

Ladice, posude za hranu, police, itd. tvornički su smještene na način prikazanom na gornjoj slici, što je energetski najučinkovitije.

Funkcije

 Upravljački panel (slika je samo informativne naravi i može odstupati od stvarnog izgleda, što ovisi o modelu). Broj i način rada funkcija ovisi o modelu.

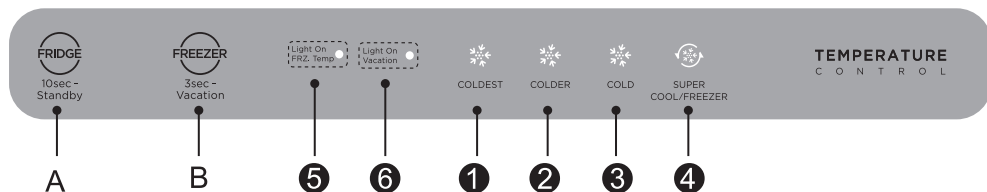

A - Tipka za odabir postavki u hladnjaku / Mod pripravnosti (Standby)

B - Tipka za odabir postavki u ledenici / Mod godišnjeg odmora

Simboli na displayu:

1 - LED 1: Lagano hladno

2 - LED 2: Umjereno hladno

3 - LED 3: Hladno

4 - LED 1: Super hladno / Ledenica

5 - LED 2: Postavka ledenice

6 - LED 3: Postavka godišnjeg odmora

Uporaba upravljačkog panela

Nakon uključjenja na struju, svi simboli na displayu će zasvijetliti na 3 sekunde, te će se oglasiti zvučni signal.

Nakon toga aparat radi na postavki "2" koja svijetli.

Ako dođe do greške, na zaslonu će se prikazati kod greške, koji je potrebno dojaviti servisnoj službi.


Kod greške	Opis greške
Trepere LED "5" i LED "6"	Greška temperaturnog senzora u ledenici
Trepere LED "1" i LED "6"	Greška temperaturnog senzora u hladnjaku
Trepere LED "1" i LED "2"	Greška senzora za led u ledenici
Trepere LED "6" i LED "3"	Greška ambijentalnog senzora
Trepere LED "1" i LED "3"	Greška u prijenosu podataka

Podešavanje temperature

Pritiskom na tipku A mijenjaju se postavke u komori za hlađenje (hladnjak).

Pritiskom na tipku B mijenjaju se postavke u komori za zaleđivanje (ledenica), pri čemu zasvijetli simbol .

 Nakon podešavanja, aparat će raditi na novo postavljenoj temperaturi, ali nakon 15 sekundi.



Podešavanje brzog hlađenja

Pritisnuti i držati tipku A, dok se ne upali simbol, , pri čemu se uključuje funkcija brzog hlađenja u hladnjaku nakon 15 sekundi.

Funkcija se poništava pritiskom na tipku A.

Ako se funkcija ne poništi tada će se automatski isključiti nakon 6 sati.

Podešavanje brzog zaleđivanja

Pritisnuti tipku B pri čemu se upali simbol , pa ponovo pritisnuti tipku B dok se ne upali simbol, , pri čemu se uključuje funkcija brzog zaleđivanja u ledenici nakon 15 sekundi.

Funkcija se poništava pritiskom na tipku B.

Ako se funkcija ne poništi tada će se automatski isključiti nakon 40 sati.

Preporučuje se pričekati 12 sati nakon uključivanja ove funkcije, prije nego se odjednom stavi veća količina zamrznute hrane u ledenicu.

Funkcija pripravnosti (standby)

Aktiviranje funkcije - Pritisnuti tipku A i držati oko 10 sekundi. Display i sve ostalo će se isključiti.

Deaktiviranje funkcije - Pritisnuti tipku A i držati oko 10 sekundi. Aparat ponovo uključiti i vratiti u normalni mod rada.

Funkcija godišnjeg odmora

Pritisnuti tipku B u trajanju od 3 sekunde kako bi se aktivirala funkcija, pri čemu se upali simbol , a funkcija će biti aktivna nakon 15 sekundi.

Komora hladnjaka se automatski isključuje, a komora ledenice se automatski postavlja na postavku "2".

Funkcija se poništava pritiskom na tipku A ili na tipku B dok se ne ugasi simbol .

Komora ledenice

Komora ledenice služi za duboko zamrzavanje hrane, čuvanje zamrznute hrane na duži vremenski period, kao i za pravljenje kockica leda.

Ako se aparat koristi prvi put, spremanje veće količine hrane može znatno utjecati na efekt zamrzavanja u ledenici.

Nemojte stavljati svježiju hranu do već zamrznute hrane jer se zamrznuta hrana može početi otapati.

Ako se zamrzava veća količina svježije hrane (npr. meso, riba ili faširano meso), tada se ista može podijeliti na manje dijelove i posebno zamrznuti, čime se olakšava pristup istoj, ali i propisno zamrzavanje.

Držati se preporuka proizvođača hrane u svezi roka trajanja, koje je na pakiranju, a ako toga nema, treba biti vrlo oprezan.

Pri kupovini zamrznute hrane, voditi računa da je hrana pravilno zamrznuta na odgovarajuću temperaturu, te da pakiranje nije oštećeno.

Zamrznutu hranu treba čuvati u odgovarajućim individualnim pakiranjima kako ne bi došlo do kontaminacije. Odmrznutu hranu treba odmah konzumirati, nikako je zamrzavati ponovno jer može doći do zdravstvenih problema.

Hrana se može sačuvati određeni broj sati ako dođe do nestanka električne struje, a tada ne otvarajte vrata te ne stavljajte svježiju hranu u hladnjak.

U slučaju dužeg nestanka struje ili kvara, hranu je potrebno ukloniti i provjeriti da li je još uvijek jestiva.

Kako bi se zamrznuta hrana otopila, potrebno ju je izvaditi iz aprata, te ostaviti na sobnoj temperaturi ili unutar hladnjaka. Za brzo odmrzavanje moguće je koristiti mikrovalnu ili običnu pećnicu (ako imaju funkciju brzog odmrzavanja).

Ako se želi upotrijebiti samo dio pakirane hrane, tada je potrebno brzo odrezati dio koji želimo, a ostatak hermetički umotati i vratiti u ledenicu. Koristiti zaštitne rukavice kako bi se izbjegle hladne opekotine.

NAPOMENA! Spremanje velike količine hrane, nakon što se aparat priključi na električnu mrežu, može utjecati na efekt hlađenja komore hladnjaka. Spremljena hrana **NE SMIJE** blokirati otvore za strujanje zraka, jer će u suprotnom efekt zamrzavanja također biti doveden u pitanje.

Komora hladnjaka

Hladnjak služi za čuvanje svježeg voća, povrća, pića i ostale hrane koja će se konzumirati u kraćem periodu (3 do 5 dana).

Kuhanu hranu nije preporučljivo staviti u komoru prije nego se ohladi na sobnu temperaturu.

Kako bi se izbjeglo zamagljenje i nagomilavanje leda, nije preporučljivo stavljanje tekućina koje nisu u zatvorenim posudama.

Hrana ili ambalaža ne smije dodirivati stražnju stijenku komore jer bi se mogla zamrznuti za stijenku.

Hranu je potrebno staviti u zatvorenu posudu prije stavljanja u hladnjak.

Meso i očišćenu ribu (pakiranu u plastičnu foliju) može se držati u komori 1 do 2 dana.

Voće i povrće bez ambalaže može biti stavljeno u zato namijenjenu ladicu.

Staklene police moguće je podesiti po visini kako bi se jednostavno osigurao prostor u koji ćemo spremati hranu.

Temperature i vrijeme čuvanja hrane

Predugo držanje hrane, ili držanje hrane na neodgovarajućoj temperaturi može uzrokovati gubitak kvalitete, kvarenje, bacanje hrane, trovanje hranom.

Minimalna temperatura unutar komore za zamrzavanje (ledenica) je -18°C ili niža.

Preporuka je slijedeća:

- variva, sladoled, kobasice, kruh: 2 do 6 mjeseci
- riba, škampi, janjetina, meso: 4 do 8 mjeseci
- povrće, voće, govedin: 6 do 12 mjeseci

Čišćenje i održavanje

Prije početka čišćenja OBVEZATNO odvojiti aparat od električne mreže, tako da se izvuče utikač iz utičnice.

Prašinu koja se nakuplja oko aparata treba redovito čistiti kako bi se poboljšao efekt hlađenja kao i smanjila potrošnja.

Brtve na vratima potrebno je redovito provjeravati jer se lako zaprljaju pa ih treba redovito čistiti. Pri tome se može koristiti meka krpa navlažena sapunicom ili tekućim deterdžentom za posuđe.

Unutrašnjost hladnjaka mora se redovito čistiti kako bi se izbjegli neugodni mirisi, ali prije toga potrebno je ukloniti svu hranu, pića, police, ladice, itd. Pri tome koristiti meku krpu ili spužvu namočenu u toplu vodu s otopljenom sodom bikarbonom.

Nakon toga obrisati krpom navlaženom čistom vodom te potom obrisati suhom krpom i ostaviti vrata otvorena dok se unutrašnjost kompletno ne osuši.

Mjesta koja nisu lako dostupna za čišćenje (uski spojevi, otvori, bridovi i sl.) treba očistiti mekom krpom, a ako je potrebno i uz pomoć štapića oko kojeg omotamo krpom, kako bi se očistile nakupine prljavštine ili bakterija.

Nije dozvoljena uporaba grubih četki, metalne vune, abrazivnih sredstava, organskih otapala (alkohol, aceton, benzin, itd.), vruće vode, kiselina ili lužina.

Aparat se ne smije čistiti visokotlačnim parnim aparatom za čišćenje, kao ni prskanje ili ispiranje vodom, jer može doći do kratkog spoja i oštećenja.

Nije dozvoljena uporaba sapuna, deterdženata, abrazivnih tekućina i prašaka, sprejeva za čišćenje, jer ta sredstva ostavljaju mirise u unutrašnjosti aparata ili mogu zagaditi hranu.

Držači boca, police i ladice treba čistiti mekom krpom navlaženoj sa sapunicom ili tekućim deterdžentom za posuđe.

Zatim osušiti pomoću suhe krpe. Vanjske površine aparata čistiti mekom krpom navlaženoj sa sapunicom ili tekućim deterdžentom za posuđe. Zatim osušiti pomoću suhe krpe.

Nije dozvoljena uporaba oštih ili metalnih predmeta kako bi se

otklonio led s površina, jer se tako mogu oštetiti dijelovi sistema za hlađenje i unutrašnjost.



Odmrzavanje

Aparat je baziran na cirkulaciji hladnog zraka (no-frost) unutar komora, pa zbog toga ima automatsko odmrzavanje.

Ako se ipak nakupi led tada se može i ručno odmrzavati kako slijedi.

Aparat odspojimo iz električne mreže, tako da se izvuče utikač iz utičnice.

Ukloniti svu hranu iz aparata i staviti je na hladno mjesto kako se ne bi otopila.

Postavimo posudu i krpom kako se kondenzat ne bi proljevao po podu.

Ostavimo da se led prirodno otopi. Višak leda bi se mogao pažljivo ostrugati posebnom lopaticom za led (ovisno o modelu može ili ne mora biti isporučeno).

Očistimo i cijev za odvod kondenzata ali mekanim predmetom kako se nebi oštetio.

Očistimo sve iznutra te osušimo suhom mekom krpom.

Vratimo hranu u aparat.

 
Aparat priključimo na električnu mrežu.

Nije dozvoljena uporaba mehaničkih ili sličnih naprava kako bi se ubrzao proces otapanja. Raditi pažljivo kako se ne bi oštetio rashladni sistem.

Aparat radi kontinuirano nakon što se priključi na električnu mrežu. Nije dozvoljeno nepotrebno uključivanje ili isključivanje aparata s električne mreže.


Nestanak električne energije - u slučaju prekida opskrbe električnom energijom, hrana unutar aparata može se održati nekoliko sati. Otvaranje vrata svesti na što manju mjeru, te ne stavljati svježiju hranu u aparat.

Čišćenje polica na vratima

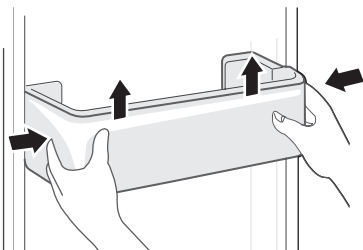

Prihvatite полицu s obje ruke, te je lagano stisnete kako pokazuju strelice, te istu pogurnite prema gore (u smjeru strelica) i izvadite van. Nakon čišćenja police, vratite je natrag. Prema potrebi možete podesiti i visinu police.

 
Čišćenje staklenih polica

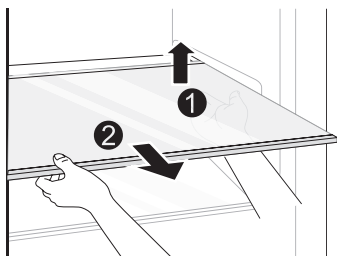

Police imaju sistem zaštite od izvlačenja, pa je potrebno istu podići prema gore kako bi se izvukla van.

Nakon čišćenja, полицu vratite na mjesto, ali je, prema potrebi, možete postaviti na drugu visinu.

 Čišćenje ladica za povrće

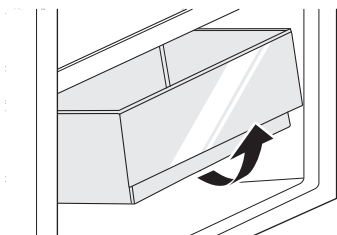

Prihvatite ladicu za ručku i izvucite prema van, te je zakrenite prema gore i potpuno izvucite van. Nakon čišćenja, vratite ladicu natrag.

Ako se aparat ne koristi duže vrijeme - (npr. tijekom ljetnih praznika) isključite ga iz električne utičnice, dobro ga očistite i osušite te ostavite vrata otvorena radi sprječavanja stvaranja neugodnog mirisa i pljesni od vlage.


Mogući problemi i njihovo rješavanje

Ukoliko Vaš aparat ne radi ispravno, uzrok bi mogla biti neka sitnica. Kako biste uštedijeli vrijeme i novac prije pozivanja servisera, provjerite sljedeće. Ukoliko niti jedna metoda ne poluči rezultat, tada se treba obratiti ovlaštenom servisu.

Aparat ne radi	Provjeriti postoji prekid, nestanak električne energije, da li je utikač korektno spojen na utičnicu, da li je pregorio osigurač, da li je mrežni napon prenizak, da li je na displayu poruka greške.
Neugodan miris	Provjeriti da li je hrana, koja sama po sebi ima intenzivan miris, dobro zapakirana, da li je hrana počela truliti. Unutrašnjost hladnjaka treba biti očišćena.
Kompresor predugo radi	Normalno je da kompresor duže radi tijekom ljeta kada su okolišne temperature visoke. Provjeriti da li je hladnjak pretovaren hranom, da li je odjednom stavljena veća količina hrane, da li je dodana nova količina hrane prije nego se prije stavljena hrana zaledila, da li se vrata hladnjaka često otvaraju, debeli sloj leda iinja u prostoru za zaleđivanje.
Osvjetljenje ne radi	Provjeriti da li je aparat priključen na električnu energiju te da li je oštećeno osvjetljenje. Osvjetljenje smije zamjeniti samo kvalificirano servisno osoblje.
Vrata se ne mogu pravilno zatvoriti	Provjeriti da li su vrata onemogućena zbog stavljanja prevelike količine hrane ili ambalaže, da li je aparat izbalansiran (pravilno postavljen na podlogu), da li je deformirana brtva na vratima.
Aparat radi preglasno	Provjeriti da li je aparat postavljen stabilno, da li se nešto nalazi naslonjeno iza aparata, da li police ili predmeti na policama vibriraju, da li predmeti postavljeni na aparat još uvijek vibriraju.
Brtva na vratima ne brtvi	Ukloniti strana tijela (nakupine, objekte, i sl.) sa brtvi. Zagrijati te ohladiti brtve kako bi se kondicionirale (pomoću pihala na vrući zrak ili vrućeg ručnika). PAZITI NA TEMPERATURU kako se brtve ne bi uništile.
Posuda za prihvat kondenzata je prenapunjena	Prenapunjenost hranom unutar komore ili hrana sadrži previše vode što uzrokuje snažno odmrzavanje. Vrata nisu propisno zatvorena, što uzrokuje nakupljanje inja zbog ulaza zraka te se povećava količina vode koja se odmrzava.
Kapljice vode unutar hladnjaka	Vrata aparata nisu propisno zatvorena. Zatvoriti vrata.
Zagrijanost kućišta	Izmjena topline izvršava se preko kondenzatora ugrađenog unutar stranica kućišta, pa se isto zagrijava. Zagrijavanje može biti veliko ako je okolišnja temperatura visoka, ako je spremljena velika količina hrane, ili je kompresor isključen pa se izmjena topline izvršava ventilacijom. Ovo je normalna pojava.
Otežano otvaranje vrata	Kako topli zrak ulazi u hladnjak kada su vrata otvorena i zadržava se u njoj kada se vrata zatvore, taj se topli zrak unutra hladnjaka steže i stvara potlak i tako zatvara proizvod. Ovo je normalna pojava i bolje je pričekati par minuta te onda opet normalno otvoriti vrata.

Kondenziranje vode na površinama	Može se dogoditi u uvjetima visoke vlažnosti zraka. Kondenzat se može obrisati suhom krpom. Brtva na vratima je slaba. Vrata nisu propisno zatvorena.
Buka i čudni zvukovi aparata	Zvuk ključanja, šuma, stenjanja ili toka vode - ovaj se zvuk emitira kad rashladno sredstvo teče kroz cijevi unutar sustava. Buka kompresora - to je normalna buka motora. Taj zvuk pokazuje da kompresor normalno radi. Kad se kompresor uključuje ili isključuje, on može raditi malo bučnije kroz kratak vremenski period. Elektromagnetski ventili proizvode zvuk škljocanja. Buka zbog nebalansiranog aparata - podesiti nogice za niveliranje. Buka predmeta unutar/izvan aparata - rasporediti predmete da se ne dodiruju (boce, posude, itd), pomaknuti aparat od namještaja.
Inje na otvorima za ventilaciju	Vrata nisu propisno zatvorena, hrana blokira ventilacijske otvore, slaba brtva na vratima.
Razlika u postavljenoj i stvarnoj temperaturi	Stavljena topla hrana, pa se temperatura privremeno podigne. Nakon postavke na drugu temperaturu, potrebno je neko vrijeme da komora postigne podešenu temperaturu. Nakon što se temperatura ustalila, moguće je odstupanje na različitim mjestima unutar aparata, što je normalno.

Informacija o proizvodu / Informacijski list / Parameter sheet		
MODEL	<i>Customer Model</i>	UHC54300SBM
Klimatski razred	<i>Climate Class</i>	SN/N/ST/T
Zaštita od električnog udara	<i>Protection Against Electric Shock</i>	I
Nazivni napon	<i>Rated Voltage/Frequency</i>	AC220-240V/50Hz
Snaga grijača	<i>Defrosting heater(W)</i>	185
Nazivna snaga osvjetljenja	<i>Lamp Rated Power(W)</i>	2
Nazivna struja	<i>Rated Current(A)</i>	1,2
Sredstvo za pjenjenje izolacije	<i>Foaming Agent</i>	Cyclopentane
Godišnja potrošnja energije	<i>Annual energy consumption AE [kWh/a]</i>	245
Potrošnja energije E16	<i>Energy consumption E16 (kWh/24h)</i>	-
Potrošnja energije E32	<i>Energy consumption E32 (kWh/24h)</i>	0,960
Razred energetske učinkovitosti	<i>Energy Efficiency Class</i>	E
Ukupni volumen	<i>Total Volume(L)</i>	300
Volumen odjeljka hladnjaka	<i>Fresh food compartment Volume(L)</i>	213
Volumen odjeljka ledenice	<i>Freezer compartment Volume(L)</i>	87
Volumen odjeljka ledenice (4 zvijezdice)	<i>Four-star compartment Volume(L)</i>	87
Rashladno sredstvo, masa	<i>Refrigerant,Amount</i>	R600a/30g
Kapacitet zaleđivanja	<i>Freezing Capacity(kg/24h)</i>	6
Vrijeme porasta temperature	<i>Temperature rise value(h)</i>	9
Neto težina	<i>Net Weight(kg)</i>	70
Bruto težina	<i>Gross Weight(kg)</i>	77
Razina buke i razred	<i>Noise(dB(A)) and Noise Level</i>	35, B
Dimenzija proizvoda (ŠxDxV)	<i>Product Overall Dimensions(mm)(WxDxH)</i>	540X550X1955
Dimenzija pakiranja (ŠxDxV)	<i>Carton Dimensions(mm)(WxDxH)</i>	580X610X2035

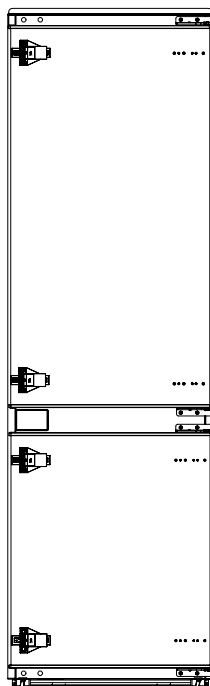 

Refrigerator

Instruction Manual



- > Warning notices: Before using this product, please read this manual carefully and keep it for future reference. The design and specifications are subject to change without prior notice for product improvement. Consult with your dealer or manufacturer for details. The diagram above is just for reference. Please take the appearance of the actual product as the standard.

Contents

Important safety instructions	2
Environmental protection.....	5
Install Instruction.....	6
Installation in cabinet	7
Doors reversal.....	9
Changing the light	11
Moving the appliance	11
Tips for energy saving.....	11
Product overview	12
Parts and functions	12
Operation Instructions	13
Use and functions	13
Storing food.....	15
Maintenance and cleaning.....	16
Trouble shooting.....	18
Appendix	20
Special for new European standard	20

Before switching on the appliance for the first time read the following safety hints!

- > This appliance is intended to be used in household and similar applications such as staff kitchen areas in shops, offices and other working environments; farm houses and by clients in hotels, motels and other residential type environments; bed and breakfast type environments; catering and similar non-retail applications.
- > This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Explanation of terms/symbols

	DANGER This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas.
	WARNING The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.
	CAUTION The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.
	ATTENTION The signal word indicates important information (e.g. damage to property), but not danger.

IMPORTANT: Pay particular attention to messages that contain the words **DANGER**, **WARNING** or **CAUTION**. These words are used to alert you to a potential hazard that can seriously injure you and others.

The instructions will tell you how to reduce the chance of injury and let you know what can happen if the instructions are not followed.

ATTENTION: These operating instructions are general. This means that certain functions apply to your refrigerator/freezer, while others do not.

We are constantly working on the further development and improvement of our appliance types and models. Therefore, we reserve the right to make changes to the design, equipment and accessories of all types and models without prior notice.

IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS!



WARNING: Risk of fire / flammable material

Refrigerant and cyclopentane foaming material used for the appliance are flammable. Therefore, when the appliance is scrapped, it shall be kept away from any fire source and be recovered by a special recovering company with corresponding qualification other than be disposed by combustion, so as to prevent damage to the environment or any other harm



WARNING

General Safety

- > Children should be supervised to ensure that they do not play with the appliance.
- > If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- > Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- > The appliance has to be unplugged after use and before carrying out user maintenance on the appliance.
- > **WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- > **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- > **WARNING:** Do not damage the refrigerant circuit.
- > **WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- > **WARNING:** Please abandon the refrigerator according to local regulators for its use flammable blowing gas and refrigerant.
- > **WARNING:** When positioning the appliance, ensure the supply cord is not trapped or damaged.
- > **WARNING:** Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- > Do not use extension cords or ungrounded (two prong) adapters.
- > To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.
- > The refrigerator must be disconnected from the source of electrical supply before attempting the installation of accessory. Ensure that the power cable is not trapped by the refrigerator. Do not step on the power cable.



CAUTION

Daily use

- > Do not pull the power cord when pulling the power plug of the refrigerator. Please firmly grasp the plug and pull out it from the socket directly.
- > To ensure safe use, do not damage the power cord or use the power cord when it is damaged or worn.
- > Please use a dedicated power socket and the power socket shall not be shared with other electrical appliances.
- > The power plug should be firmly contacted with the socket or else fires might be caused.
- > Please ensure that the grounding electrode of the power socket is equipped with a reliable grounding line.
- > Please turn off the valve of the leaking gas and then open the doors and windows in case of leakage of gas and other flammable gases.
- > Do not unplug the refrigerator and other electrical appliances considering that spark may cause a fire.
- > Do not use electrical appliances on the top of the appliance, unless they are of the type recommended by the manufacturer.
- > The gaps between refrigerator doors and between doors and refrigerator body are small, be noted not to put your hand in these areas to prevent from squeezing the finger. Please be gentle when close the refrigerator door to avoid falling articles.
- > Do not pick foods or containers with wet hands in the freezing chamber when the refrigerator is running, especially metal containers in order to avoid frostbite.
- > Do not allow any child to get into or climb the refrigerator; otherwise suffocation or falling injury of the child may be caused.
- > Do not place heavy objects on the top of the refrigerator considering that objectives may fall when close or open the door, and accidental injuries might be caused.
- > Do not put flammable, explosive, volatile and highly corrosive items in the refrigerator to prevent damages to the product or fire accidents.
- > Do not place flammable items near the refrigerator to avoid fires.
- > The refrigerator is intended for household use, such as storage of foods; it shall not be used for other purposes, such as storage of blood, drugs or biological products, etc.
- > Do not store beer, beverage or other fluid contained in bottles or enclosed containers in the freezing chamber of the refrigerator; or otherwise the bottles or enclosed containers may crack due to freezing to cause damages.



WARNING

- > Connect to potable water supply only. (Suitable for ice cube maker) (*)
- > To prevent children from being entrapped, the keys must be kept out of reach of children and not in the vicinity of chest freezer (or refrigerator) (suitable for products with locks).(*)

(*) : This feature varies depending on the model purchased.



WARNING

For EU standard:

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

To avoid contamination of food, please respect the following instructions:

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Clean water tanks if they have not been used for 48h; flush the water system connected to a water supply if water has not been drawn for 5 days. **(Note 1)(*)**
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star frozen-food compartments are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes. **(Note 2)(*)**
- 1 star, 2 star and 3 star compartments are not suitable for the freezing of fresh food. **(note 3)(*)**
- For appliances without a 4-star compartment: this refrigerating appliance is not suitable for freezing foodstuffs. **(note 4)(*)**
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.

Note 1,2,3,4: Please confirm whether it is applicable according to your product compartment type.

(*): This feature varies depending on the model purchased.



"4 star" symbol: Freezer at -18 °C or colder, and it has the ability of quick freezing a certain amount of food



"3 star" symbol: Freezer compartment at -18 °C or colder



"2 star" symbol: Freezer compartment at -12 °C or colder



"1 star" symbol: Freezer compartment with a target temperature and storage conditions of -6 °C



CAUTION

This product is not recommended for use with sockets or main switch with the AFCI/GFCI function, otherwise it may cause false tripping.

1. It's not pose a safety risk when tripped.
2. If tripping persists, it is recommended to replace the sockets or main switch without AFCI/GFCI function.



WARNING

Risk of child entrapment. Before you throw away your old refrigerator or freezer:

- > Take off the doors.
- > Leave the shelves in place so that children may not easily climb inside.

ENVIRONMENTAL PROTECTION

Disposing of old electrical devices in an environmentally-friendly manner



This crossed-out wheeled bin symbol indicates that waste electrical and electronic products (WEEE) should be disposed of separately from the municipal waste stream.

Old electrical products can contain hazardous substances so correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health. Your old appliance may contain reusable parts that could be used to repair other products, and other valuable materials that can be recycled to conserve limited resources.

Package information



Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

CAUTION

Refrigerant and cyclopentane foaming material used for the refrigerator are flammable. Therefore, when the refrigerator is scrapped, it shall be kept away from any fire source and be recovered by a special recovering company with corresponding qualification other than be disposed by combustion, so as to prevent damage to the environment or any other harm.

INSTALL INSTRUCTION

 
Before first use

Remove the exterior and interior packing, wipe the outside thoroughly with a soft dry cloth and the inside with a wet, lukewarm cloth.

Before connecting your refrigerator to the power supply, check that the voltage stated on the rating label of your appliance corresponds to the voltage in your home. A different voltage could damage the appliance.

The appliance must be grounded. The manufacturer is not responsible for damages that may occur as a result of usage without grounding.

Space requirement diagram

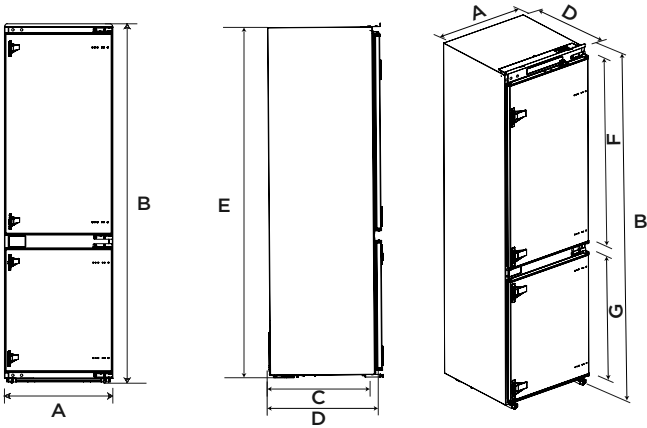

A	B	C	D	E	F	G
540	1955	515	550	1940	1076	706

Notice: All dimensions in mm

Ambient Temperature

Depending on the climate class, this refrigerator is intended to be used at an ambient temperature range as specified in the following table.

The product may not operate properly at temperatures outside of the specific range.

You can find the climate class on the product label.

Climate Class	Ambient Temperature
SN	+10 °C to +32 °C
N	+16 °C to +32 °C
ST	+16 °C to +38 °C
T	+16 °C to +43 °C

If you have any doubts regarding installation, please turn to the vendor, to our customer service or to the nearest Authorised Service Centre.

 
ATTENTION

The cooling performance and power consumption of the refrigerator may be affected by the ambient temperature, the door-opening frequency, and the location of the refrigerator. We recommend adjusting the temperature settings as appropriate.


Installation in cabinet

Steps:


1. Cabinet size requirement.

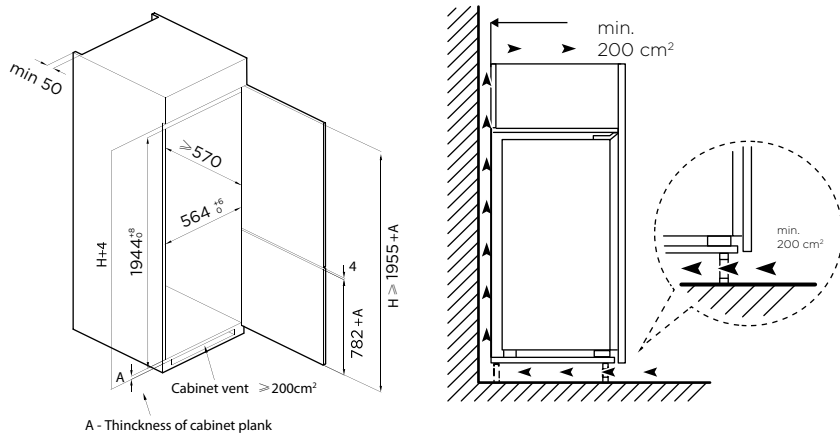

 
2. Push the refrigerator into the cabinet and adjust it to make sure the edgefold of top baffle completely touch the top edge of the cabinet, and the limit hook of supporting leg completely touch the bottom edge of the cabinet.
3. Fix the supporting leg with screws, then install the screw caps.

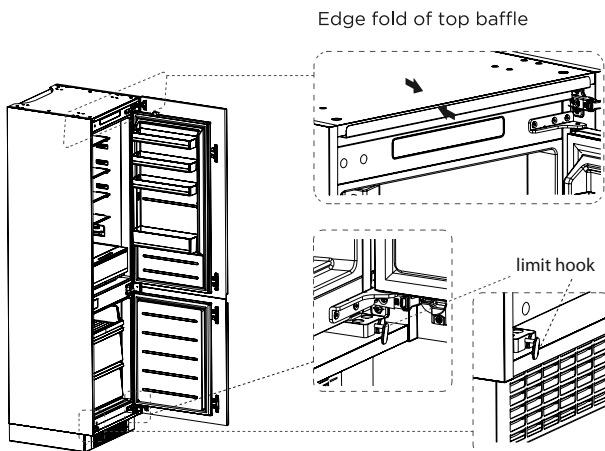

 4. Fix the top baffle to the top of the cabinet inner with screws, then install the screw caps.

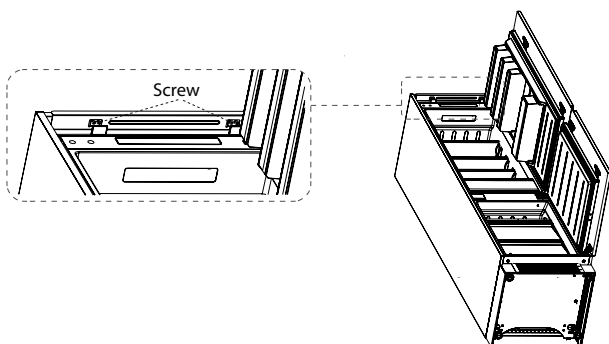

 5. Open the lower door of cabinet the maximum angle, and open the lower door of the refrigerator to the corresponding position. Sliding the block to make sure inner edge align with the lower door edge of refrigerator, then fix the block to the door of cabinet with screw and install screw caps. Fix the upper refrigerator door to the cabinet door in the same way. Exchange the fixed position of the adjustable foot and the bottom hinge, then fix them again.

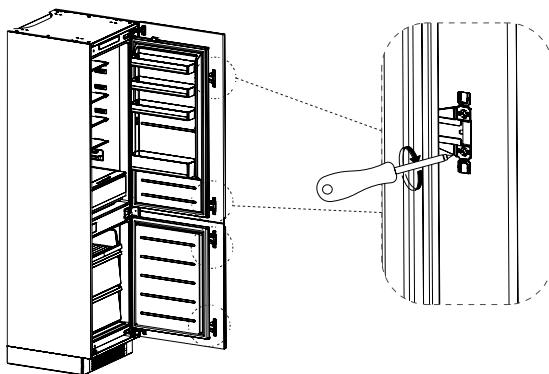


6. Take out the sealing strip from accessory bag, and press it in the gap between the cabinet and the refrigerator. Installation is completed.

ATTENTION

Precautions before installation: Information in the Instruction Manual is only for reference. The physical product may differ. Before installation and adjusting of accessories, it shall be ensured that the refrigerator is disconnected from power.


Doors reversal

 Parts already mounted on the refrigerator (as shipped):

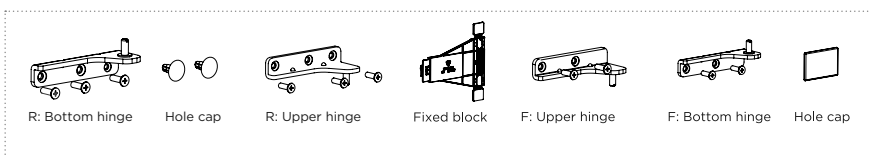


Steps:

 
1. Power off the refrigerator, and remove all objects from the door trays.
2. Remove the upper hinge and hole caps of refrigerator door.
3. Remove the refrigerator door, the bottom hinge and the hole cover.

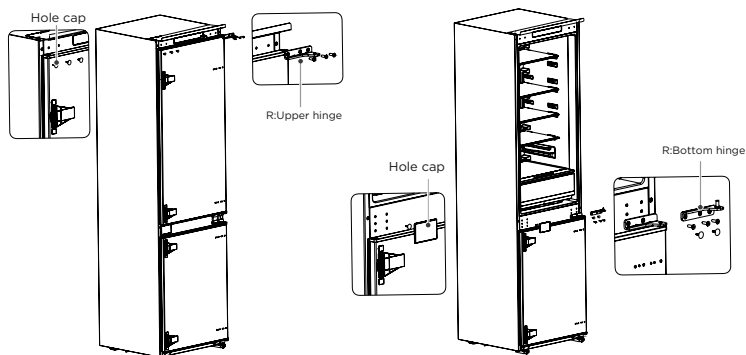

 
4. Exchange the R:bottom hinge and R:upper hinge ,then install them according to below steps, and install the top hole caps.
5. Remove the two fixed blocks of refrigerator door and rotate them for 180° and install them on other side of refrigerator door.

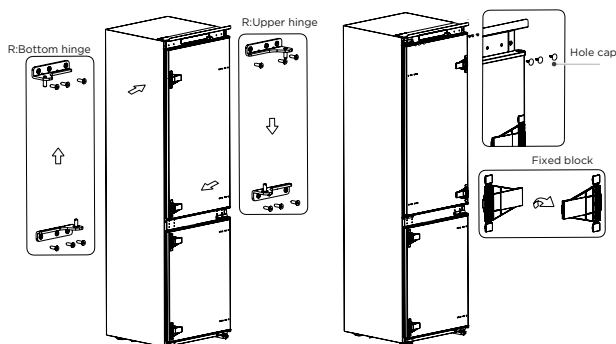

 6. Remove the the upper hinge of freezer door and plug pin.
7. Remove the freezer door, the bottom hinge and the hole caps.

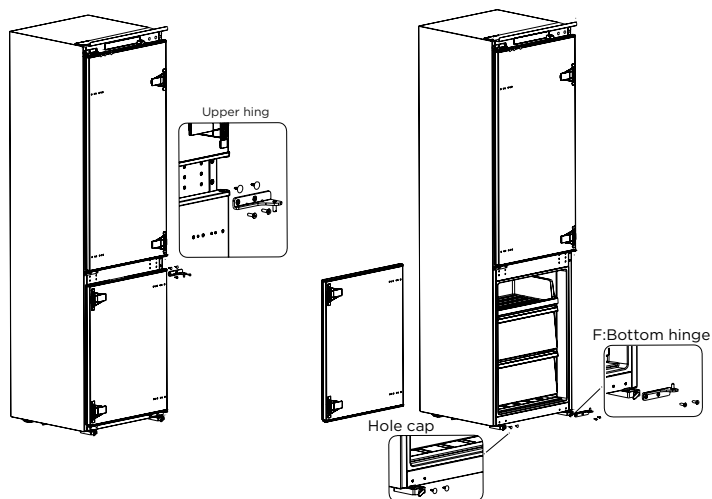

 8. Exchange the F:bottom hinge and F:upper hinge ,then install them according to below steps, and install the top hole cover and lower hole caps.
9. Remove the two fixed blocks of freezer door and rotate them for 180° and install them on other side of freezer door.

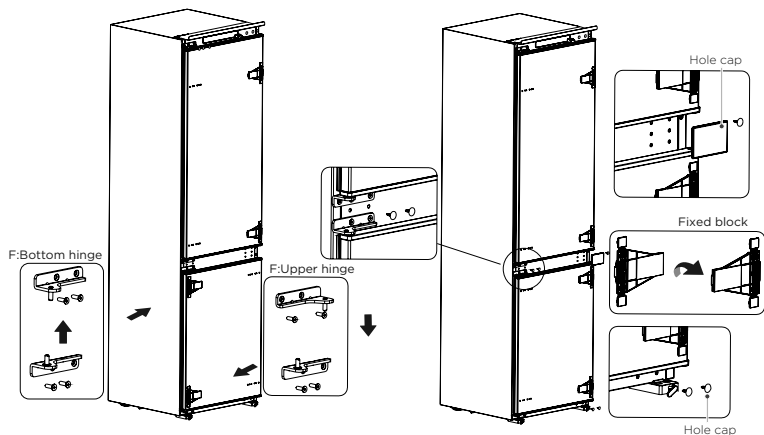

● ATTENTION

Differences: Due to technical changes and different models, some of the illustrations in this manual may differ from your model.

Changing the light

Any replacement or maintenance of the LED lamps is intended to be made by the manufacturer, its service agent or similar qualified person.

This product contains a light source of energy efficiency class (G).

After connecting the power supply cord (or plug) to the outlet, wait 2 or 3 hours before you put food into the appliance. If you add food before the appliance has cooled completely, your food may spoil.

Moving the appliance

1. Remove all items from the appliance.
2. Pull the power plug out, insert and fix it into the power plug hook at the rear or on top of the appliance.
3. Tape parts such as shelves and the door to prevent from falling off while moving the appliance.
4. Move the appliance with more than two people carefully. When transporting the appliance over a long distance, keep the appliance upright.

Tips for energy saving

Do not place the appliance near cookers, radiators or other heat sources. If the ambient temperature is high, the compressor will run more frequently and for longer, resulting in increased energy consumption.

Ensure that there is sufficient ventilation at the base of the appliance, on the sides of the appliance and at the back of the appliance.

Please also observe the spacing dimensions in the chapter "Installation".

The arrangement of drawers, shelves and trays as shown in the product overview offers the most efficient use of energy and should be retained as far as possible.

To obtain a larger storage space (e.g. for large refrigerated/frozen goods), the middle drawers and shelves can be removed. The top and bottom drawers and shelves should be removed last if necessary.

An evenly filled refrigerator/freezer compartment contributes to optimal energy use.

Allow warm food to cool before placing it in the refrigerator/freezer compartment. Food that has already cooled down increases energy efficiency.

Allow frozen food to defrost in the refrigeration compartment. The coldness of the frozen food reduces the energy consumption in the refrigerator compartment and thus increases the energy efficiency.

 
Open the door only as briefly as necessary to minimise cold loss. Opening the door briefly and closing it properly reduces energy consumption.

Setting the temperature no colder than necessary contributes to optimal energy use.

The door gaskets of your appliance must be perfectly intact so that the doors close properly and energy consumption is not increased unnecessarily.

PRODUCT OVERVIEW

Parts and functions

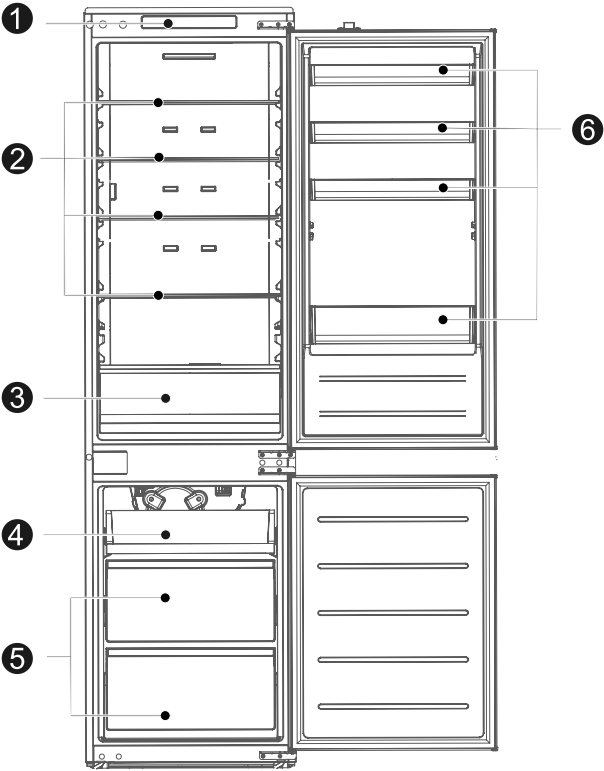

- | | | | |
|---|---------------------------|---|--------------|
| 1 | Temperatre control | 2 | Glass shelf |
| 3 | Fruits and vegetables box | 4 | Small Drawer |
| 5 | Big Drawer | 6 | Door tray |

> For the most efficient use of energy, please keep the all internal items such as trays, drawers, shelves and ice cube box on the position supplied by manufacturer.

 
ATTENTION

Differences: Due to technical changes and different models, some of the illustrations in this manual may differ from your model.

OPERATION INSTRUCTIONS

Use and functions

Feature panel

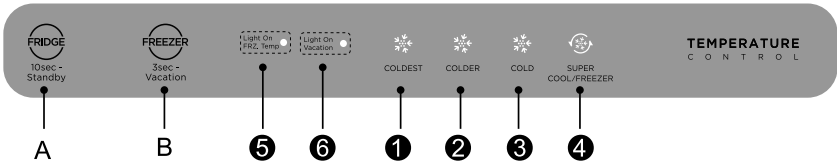

Button

- A Fridge compartment setting / Standby mode button
- B Freezer compartment setting / Vacation mode button

Display screen

- 1 LED 1 : COLDEST
- 2 LED 2 : COLDER
- 3 LED 3 : COLD
- 4 LED 4 : ^{SUPER}COOL/FREEZER
- 5 LED 5 :

Light On
FRIG. Temp.
- 6 LED 6 :

Light On
Vacation

Do not use sharp objects to operate the control panel. They can scratch or damage the control panel.

Display

When powering on for the first time, the display will be complete for 3 seconds, while the start up bell will ring, and then the display will enter normal operation; (The initial power-on, the gear of freezer compartment and fridge compartment set at “COLDER”).

Fault indication

The following warnings appearing on the display indicate corresponding faults of the refrigerator. Though the refrigerator may still have a freezing function with the following faults, the user shall contact maintenance specialist for maintenance, so as to ensure normal use of the refrigerator.

Fault Code	Fault Description
The LED “5” and LED “6” flashing	Freezer temperature sensor fault
The LED “1” and LED “6” flashing	Refrigerating temperature sensor fault
The LED “1” and LED “2” flashing	Freezer frost sensor fault
The LED “6” and LED “3” flashing	Ambient temperature sensor faults
The LED “1” and LED “3” flashing	Communication faults

Temperature setting

Click the setting button A to set the fridge compartment.

Click the setting button B, the indicators  light up to set the freezer compartment.

The refrigerator will operate according to the new set gear in 15 seconds.



Tips:

The lower the set temperature, the longer you can safely store your food and the more electricity the refrigerator consumes.

The higher the set temperature, the quicker your stored food decays and the less electricity the refrigerator consumes.

Super cool mode

Click the setting button A until the icon  lightens, and the fridge compartment enters super cool mode in 15 seconds.

The fridge compartment will automatically exit super cool mode after 6 hours or press the temperature setting button A to exit Super cool mode earlier.

Super freeze mode

Click the setting button B, the indicators  light up, and click the setting button B again until the icon  lightens, and the freezer compartment enters Super freeze mode in 15 seconds.

The freezer compartment will automatically exit super freeze mode after 40 hours or press the setting button B to exit super freeze mode earlier.

It is suggested to turn on super freeze mode for 12 hours before placing large amount of frozen food in freezer compartment at one time.

Standby mode

Click the setting button A for 10 seconds to enter the standby mode. All loads and the display go off.

Under standby mode, click the setting button A for 10 seconds to restore normal control.

Vacation mode

Click the setting button B for 3 seconds to enter the vacation mode, the icon  lights up, the vacation mode will start after 15 seconds.

Under vacation mode, the fridge compartment is turned off, the freezer compartment set at COLDER.

Under vacation mode, click the setting button A or setting button B until the icon  turn off, which could exit the vacation mode.

Storing food

Freezer compartment

The freezer compartment is designated for the low-temperature freezing of food, long-term storage of frozen food, and for the production of ice cubes.

Pay attention to the star classifications (4 star, 2 star and 1 star) in the freezer compartment and the resulting storage periods for frozen food.

Do not put fresh and frozen food next to each other. The frozen food may thaw.

When freezing large amounts of fresh food (such as meat, fish or chopped meat), please divide them into several small pieces before putting in, so that they can be quickly frozen and pick up easily.

Abide by the storage times recommended by food manufacturers on the packages, there is no information on the packaging, food should not be stored frozen for longer than three months from the date of purchase.

When purchasing frozen food, make sure that it was frozen at a suitable temperature and that the packaging is not damaged.

Frozen food should be kept in suitable individual packages to ensure that adjacent food cannot be contaminated. Consume thawed and defrosted foods immediately, do not refreeze them.

In case of prolonged power failure or malfunction of the appliance, remove the stored frozen food and check whether they are still edible, then store them in a sufficiently cool place or in another appliance.

To defrost food, remove it from the freezer and let it defrost at room temperature or in the refrigerator. To defrost food quickly, you can use the defrost function on your microwave, for example.

If you only want to defrost part of a pack, remove the portion you need and immediately close the rest of the pack. In this way, you will avoid "freezer burn" and will reduce ice formation on the remaining foods.

Cooling compartment

To reduce moisture and subsequent ice build-up, never put liquid into the fridge compartment in unsealed containers. Frost tends to concentrate in the coolest parts of the evaporator. Storing uncovered liquids results in a more frequent need for defrosting.

Never put warm foods in the fridge compartment. These should first cool down at room temperature and then be placed so as to ensure adequate air circulation in the fridge compartment.

Foods or food containers should not touch the back wall of the fridge because they could freeze to the wall. Do not keep regularly opening the door of the refrigerator.

Meat and clean fish (packed in a package or plastic foil) can be placed in the fridge compartment, which can be used in 1-2 days.

Fruit and vegetables without packaging can be placed in the part designated for fresh fruit and vegetables

ATTENTION

Storage of too much food during operation after the initial connection to power may adversely affect the freezing effect of the refrigerator.

Storage times and temperature

Note: Overlong storage or storage at inappropriate freezing temperature may cause a quality loss or spoiled foods, which causes food waste, is inedible and may cause food poisoning. The minimum temperature in most cases should be -18°C or colder. Follow the maximum recommended storage times below:

- > Stew, ice cream, sausages, bread: 2-6 months.
- > Fish, shrimp, lamb, meat: 4-8 months.
- > Vegetables, fruits, poultry, beef: 6-12 months.

MAINTENANCE AND CLEANING



CAUTION

Disconnect the appliance from the electrical supply before undertaking any routine maintenance. Allow at least 5 minutes before restarting the appliance, as frequent starting may damage the compressor.

Hold the plug, not the cable, when unplugging the appliance.

Do not scrape off frost and ice with sharp objects. Do not use sprays, electric heaters like heater, hair dryer, steam cleaners or other sources of heat in order to avoid damage to the plastic parts.

Eliminate the dust on the back of the unit at least once in the year to avoid hazard by fire, as well as increased energy consumption.

Check the door gasket regularly to make sure there are no debris. Clean the door gasket with a soft cloth dampened with soapy water or diluted detergent.

The interior of the product should be cleaned regularly to avoid odor.

Use a soft cloth or sponge to clean the inside of the product, with two tablespoons of baking soda and a quart of warm water. Then rinse with water and wipe clean. After cleaning, open the door and let it dry naturally before turning on the power.

For areas that are difficult to clean in the product (such as narrow sandwiches, gaps or corners), it is recommended to wipe them regularly with a soft rag, soft brush, etc. and when necessary, combined with some auxiliary tools (such as thin sticks) to ensure no contaminants or bacteria accumulation in these areas.

Do not use soap, detergent, scrub powder, spray cleaner, etc., as these may cause odors in the interior of the product or contaminated food.

Wipe the outer surface of the product with a soft cloth dampened with soapy water, detergent, etc., and then wipe dry.

Do not use hard brushes, clean steel balls, wire brushes, abrasives (such as toothpastes), organic solvents (such as alcohol, acetone, Isoamyl acetate, etc.), boiling water, acid or alkaline items, which

may damage the fridge surface and interior. Boiling water and organic solvents such as benzene may deform or damage plastic parts.



Do not rinse directly with water or other liquids during cleaning to avoid short circuits or affect electrical insulation after immersion.



ATTENTION

The appliance shall run continuously once it is started. Generally, the operation of the appliance shall not be interrupted; otherwise the service life may be impaired.

Defrosting

Although this appliance automatically defrosts, a layer of frost may occur on the freezer compartment's interior walls if the freezer door is opened frequently or kept open too long. If the frost is too thick, choose a time when the supply of food stocks are low and proceed as follows:

 
1. Remove existing food and accessories baskets, unplug the appliance from the mains power and leave the doors open. Ventilate the room thoroughly to accelerate the thawing process.
2. When defrosting is completed, clean your freezer as described above.

CAUTION! Don't use sharp objects to remove frost from the freezer. Only after the interior completely dry should the appliance be switched back on and plugged back into the mains socket.

Cleaning of door tray

According to the direction arrow in the figure below, use both hands to squeeze the tray, and push it upward, then you can take it out.


After washing the tray having been taken out, you can adjust its installing height in accordance with your requirement.

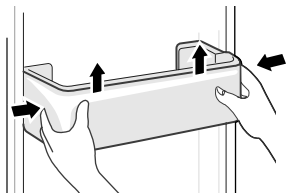

Cleaning the vegetable drawer

Remove the contents of the drawer. Hold the handle of the vegetable drawer and pull it out completely until it stops.

 
Lift the vegetable drawer up and remove it by pulling it out.

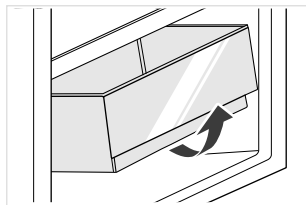

Cleaning of glass shelf

As the innermost part of the refrigerator liner where contacting the shelves has a backstop, you shall raise the shelves upward, then you can be able to take it out.

 Adjust or clean the shelves according to your requirement.

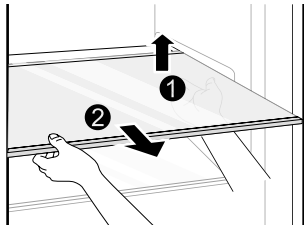

● ATTENTION

Differences: Due to technical changes and different models, some of the illustrations in this manual may differ from your model.

TROUBLE SHOOTING

The following simple issues can be handled by the user. Please call the after-sale service department if the issues are not solved.

Problem	Possible Causes	Solution
Not operate	- The power supply is not turned on and the plug is not firmly inserted. - Low voltage, power failure or part of the circuit tripped.	- Insert the power cord plug firmly. - Check the power supply at home.
Light not on	- The appliance is not powered on. - The light is broken.	- Unplug and re-plug the power cord. - Replace the light with a new one.
Fruits or vegetables are frozen	- Has the food been placed at the back of the fridge? The area near the back wall is where the temperatures are coldest. - Fruits or vegetables are stored in the Fresh/Chill zone.	- Not placing food which may freeze easily at the back of the fridge compartment. - The Fresh/Chill zone is only for meat/fish.
Fridge/freezer is over-cooling	Temperature control is not set correctly.	Set the temperature higher.
Compressor working for a long time	- High ambient temperature causing long working time. - Putting too much food in at one time. - Food is put in before it has cooled down. - Opening the door too often. - The frost layer inside is too thick.	- This is normal. - Do not put too much food in at one time. - Wait until the food has cooled down before putting it in. - Do not open the door too often. - Need to defrost.
Door does not close properly	- Door is stuck with objects. - Too much food in. - Door gasket deformed.	- Do not put in too much food. - Place the appliance stably. - Heat the door gasket, then cool it for restoration (with an electrical drier or hot water for heating).
Outer wall is hot	- When the appliance is operating, heat is dissipated to the outside through the metal tubes inside the cabinet. - Higher ambient temperatures in the summer cause the temperature of the outer wall to rise.	- Higher temperature on the outer wall is normal. - Increase the heat dissipation space, or put the appliance in a ventilated and cool place.
Cross or vertical beams are hot	There are metal tubes inside the beams, and the heat released from the tubes prevents condensation.	This is normal.
Odors	- Spoiled food - Food with strong odors - The interior compartment is dirty.	- Clean and remove any spoiled food. - Make sure strong smelling food is wrapped airtight. - Clean the interior compartment.
Condensation forms on the outside	Condensation may form when the humidity in the room is high.	This is normal. Wipe off the condensation using a dry cloth.
Condensation forms inside the fridge and drawers	- The fridge maintains a high humidity to keep vegetables and other food items fresh. - Humidity is too high in the room and doors have been opened frequently. - The door gasket are not tight.	- Wipe off the condensation using a dry cloth. - Do not open doors as frequently or do not keep them open too long. - Check the door gasket, clean or correct position.

Certain sounds can be heard during normal use of the refrigerator, which do not affect its correct operation.

Sounds, which can be easily prevented:

- > Noise caused by the appliance which is not level - adjust the position with the adjustable turn-in front feet. Alternatively, place pads made of soft material under the rear rollers, especially when the appliance is placed on tiles.
- > Touching the adjacent piece of furniture - move the refrigerator away.
- > Creaking of the drawers or shelves - take out and put back the drawer or shelf.
- > Sounds of clinking bottles - move bottles apart.

Sounds heard during normal use are mainly due to operation of the compressor (switching on) and cooling, system (thermal expansion and contraction of the radiator caused by flow of the cooling agent).

Defrosting interval claim

Environmental temperature	Interval between two defrosting cycles	Time	Specific conditions
32C	Minimum two defrosting intervals (Δt_{d-min})	12h	Heavy use, frequent opening of doors
	Maximum two defrosting intervals (Δt_{d-max})	96h	Under low humidity conditions, there is no door opening action and no special mode is set

APPENDIX

Special for new European standard

The ordered parts in the following table can be acquired from Service provider channel

Ordered part	Provided by	Minimum time required for Provision
Thermostats	Professional maintenance personnel	At least 7 years after the last model is launched on the market
Temperature sensors	Professional maintenance personnel	At least 7 years after the last model is launched on the market
Printed circuit boards	Professional maintenance personnel	At least 7 years after the last model is launched on the market
Light sources	Professional maintenance personnel	At least 7 years after the last model is launched on the market
Door handles	Professional repairers and final users	At least 7 years after the last model is launched on the market
Door hinges	Professional repairers and final users	At least 7 years after the last model is launched on the market
Trays	Professional repairers and final users	At least 7 years after the last model is launched on the market
Baskets	Professional repairers and final users	At least 7 years after the last model is launched on the market
Door gaskets	Professional repairers and final users	At least 10 years after the last model is launched on the market

Dear customer

1. If you want to return or replace the product, please contact the store where you buy.
(Remember to bring the purchase invoice)
2. If your product breaks down which needs to repair, please contact after-sales service provider.



ATTENTION

The model information in the product database, as well as the model identifier, can be obtained through a weblink scanned by a QR code, if any, on the energy efficiency label of the product.
For more information about the energy efficiency of the appliance, visit <https://ec.europa.eu> and search using the model name.
The model name can be found on the rating label of the appliance.